

## Quick Start Instructions for Operating Covert II Camera

1. Open the camera by unlocking the clasps on the right side of the camera body.
  2. Ensure your camera's power switch is in the off position.
  3. Place a minimum of 4 AA Batteries in the battery slots located inside the camera. (top 4 battery slots, if using 4 batteries)
  4. If your camera has a white remote control, it will only accept up to a 2GB SD card. If it has a black remote control, it will accept up to a 4GB SD Card.
  5. Make sure the SD card's write-protect (lock) switch is in the unlocked position. The camera will not function with the SD card in the locked position
  6. Insert SD card into the SD slot in the camera. This slot is located at the bottom of the battery holder.
  7. WITH YOUR CAMERA'S POWER SWITCH STILL IN THE OFF POSITION – insert the remote control into the remote slot, located just below the SD card slot in the camera.
  8. Switch the camera's power switch to the ON position.
- \*\*White remote only, if your remote is black, please proceed to step 16!**
9. The remote will now display the date and time, mode, number of pictures or videos stored on the SD card, amount of space remaining on the SD card.
  10. To access the menu selections and begin programming the camera press the MENU button located on the left of the OK button on the remote's face.
  11. To change a setting press the RIGHT button, also known as the SHOT key. Use this button to scroll through a list of different options associated with a specific feature of the camera.
  12. To save a change made to the camera press the OK button, located in the center on the face of the remote. If the OK button is not pressed the selection will NOT be saved.
  13. To scroll through the list of different features and programming options, use the up and down arrows on the keypad.
  14. NOTE\* -The left button functions only to select the Menu or to exit the menu to program your camera. If you have scrolled passed an option, continue scrolling, until the option recycles back to the choice you intend to use.
  15. Once you have finished programming, turn the camera off, remove the remote control.
- \*\*Black remote only**
16. The remote will now display the date and time, mode, number of pictures or videos stored on the SD card, amount of space remaining on the SD card.
  17. To access the menu selections, to begin programming the camera press the MENU button.
  18. To change a setting press the DOWN or UP arrow. Use these buttons to scroll through a list of different options associated with a specific feature of the camera.
  19. To save a change made to the camera press the OK button, located in the center on the face of the remote. If the OK button is not pressed the selection will NOT be saved.
  20. To scroll through the list of different features and programming options, use the LEFT and RIGHT arrows on the keypad.
  21. Once you have finished programming, turn the camera off, remove the remote control.